

FIG. 1

FIG. 2


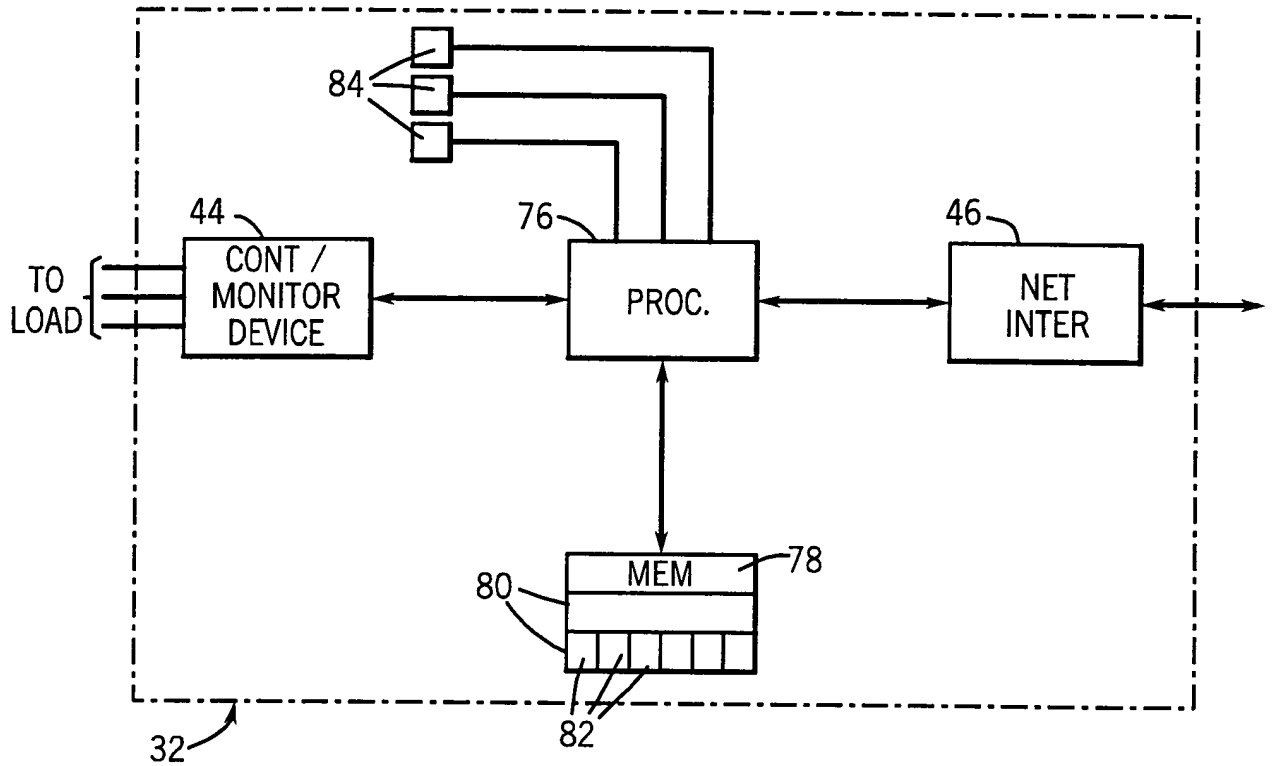


FIG. 3

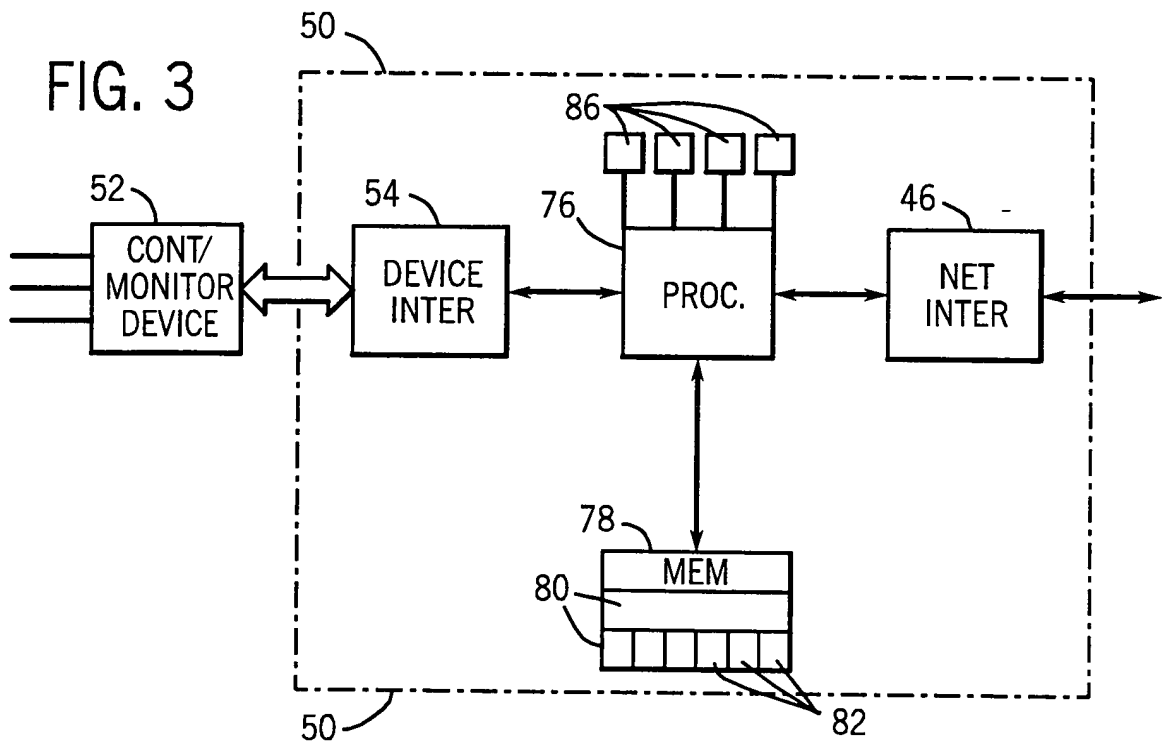

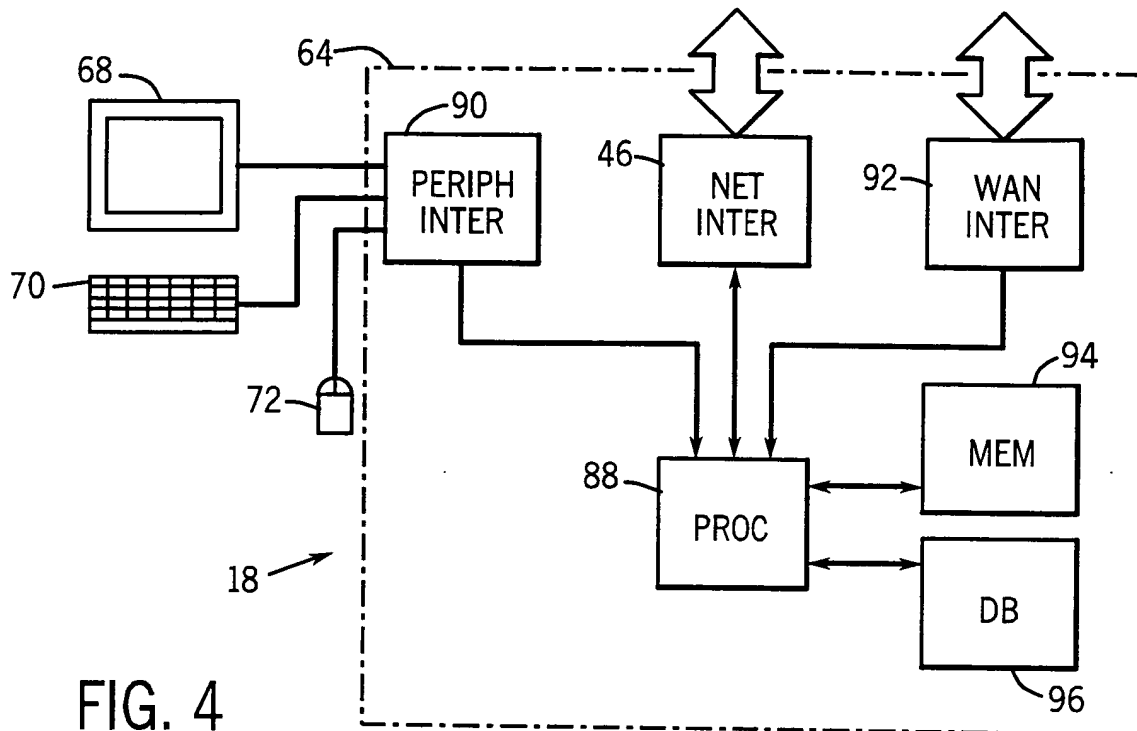
[illegible]

FIG. 4

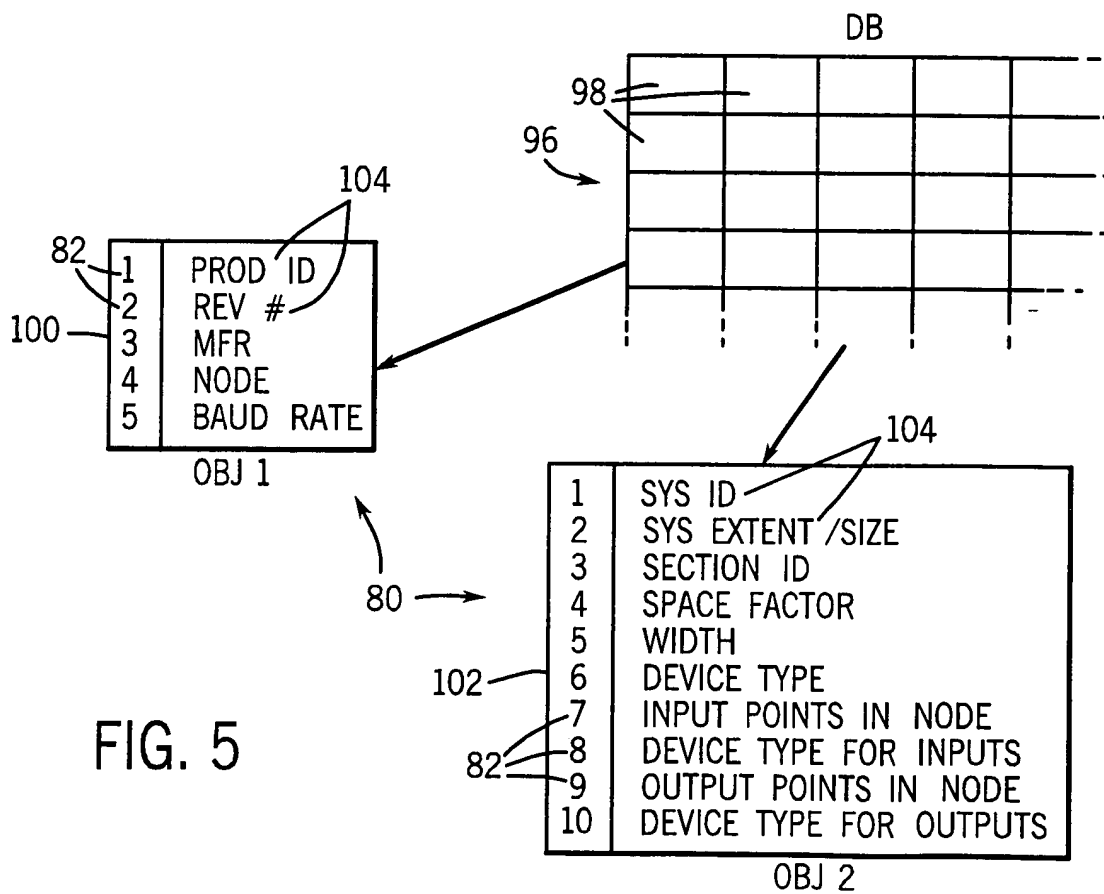


FIG. 5

 



FIG. 7

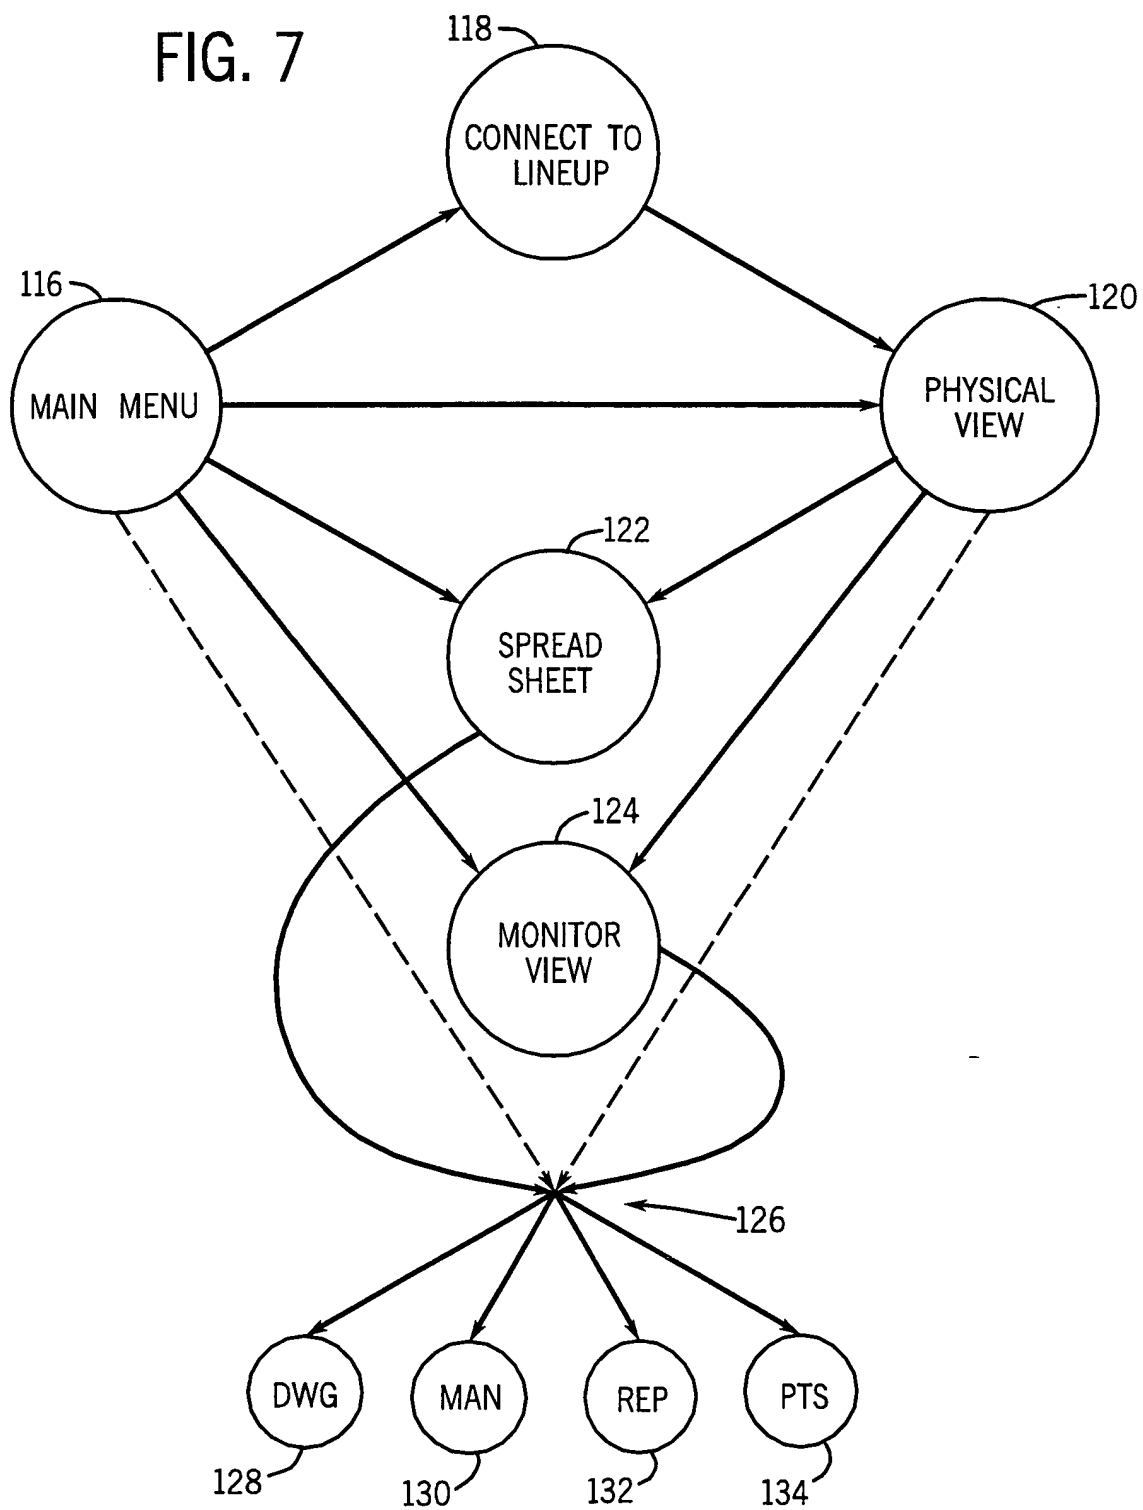

140

1. The first part of the document is a list of names and titles, including "The Hon. Mr. Justice" and "The Hon. Mr. Justice".

FIG. 9

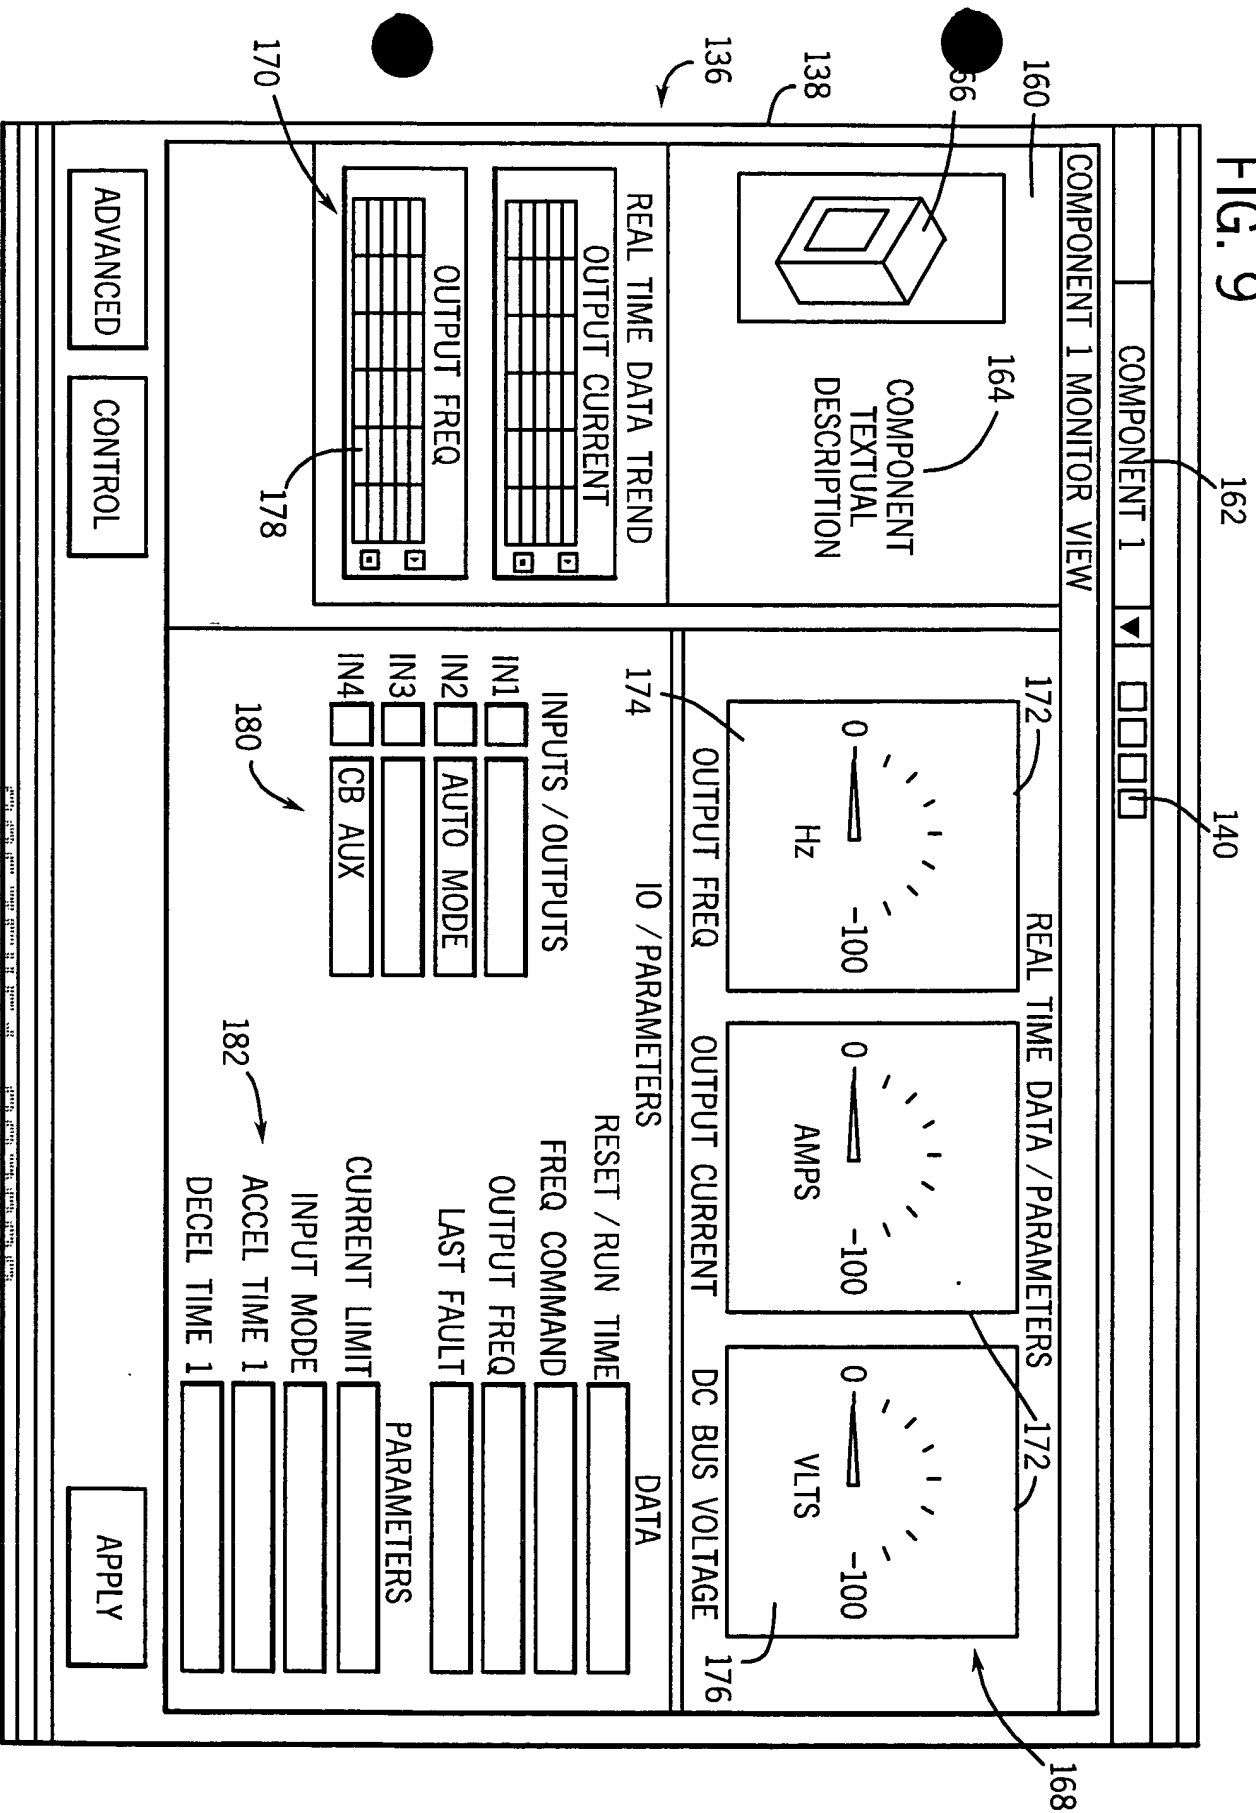


FIG. 10

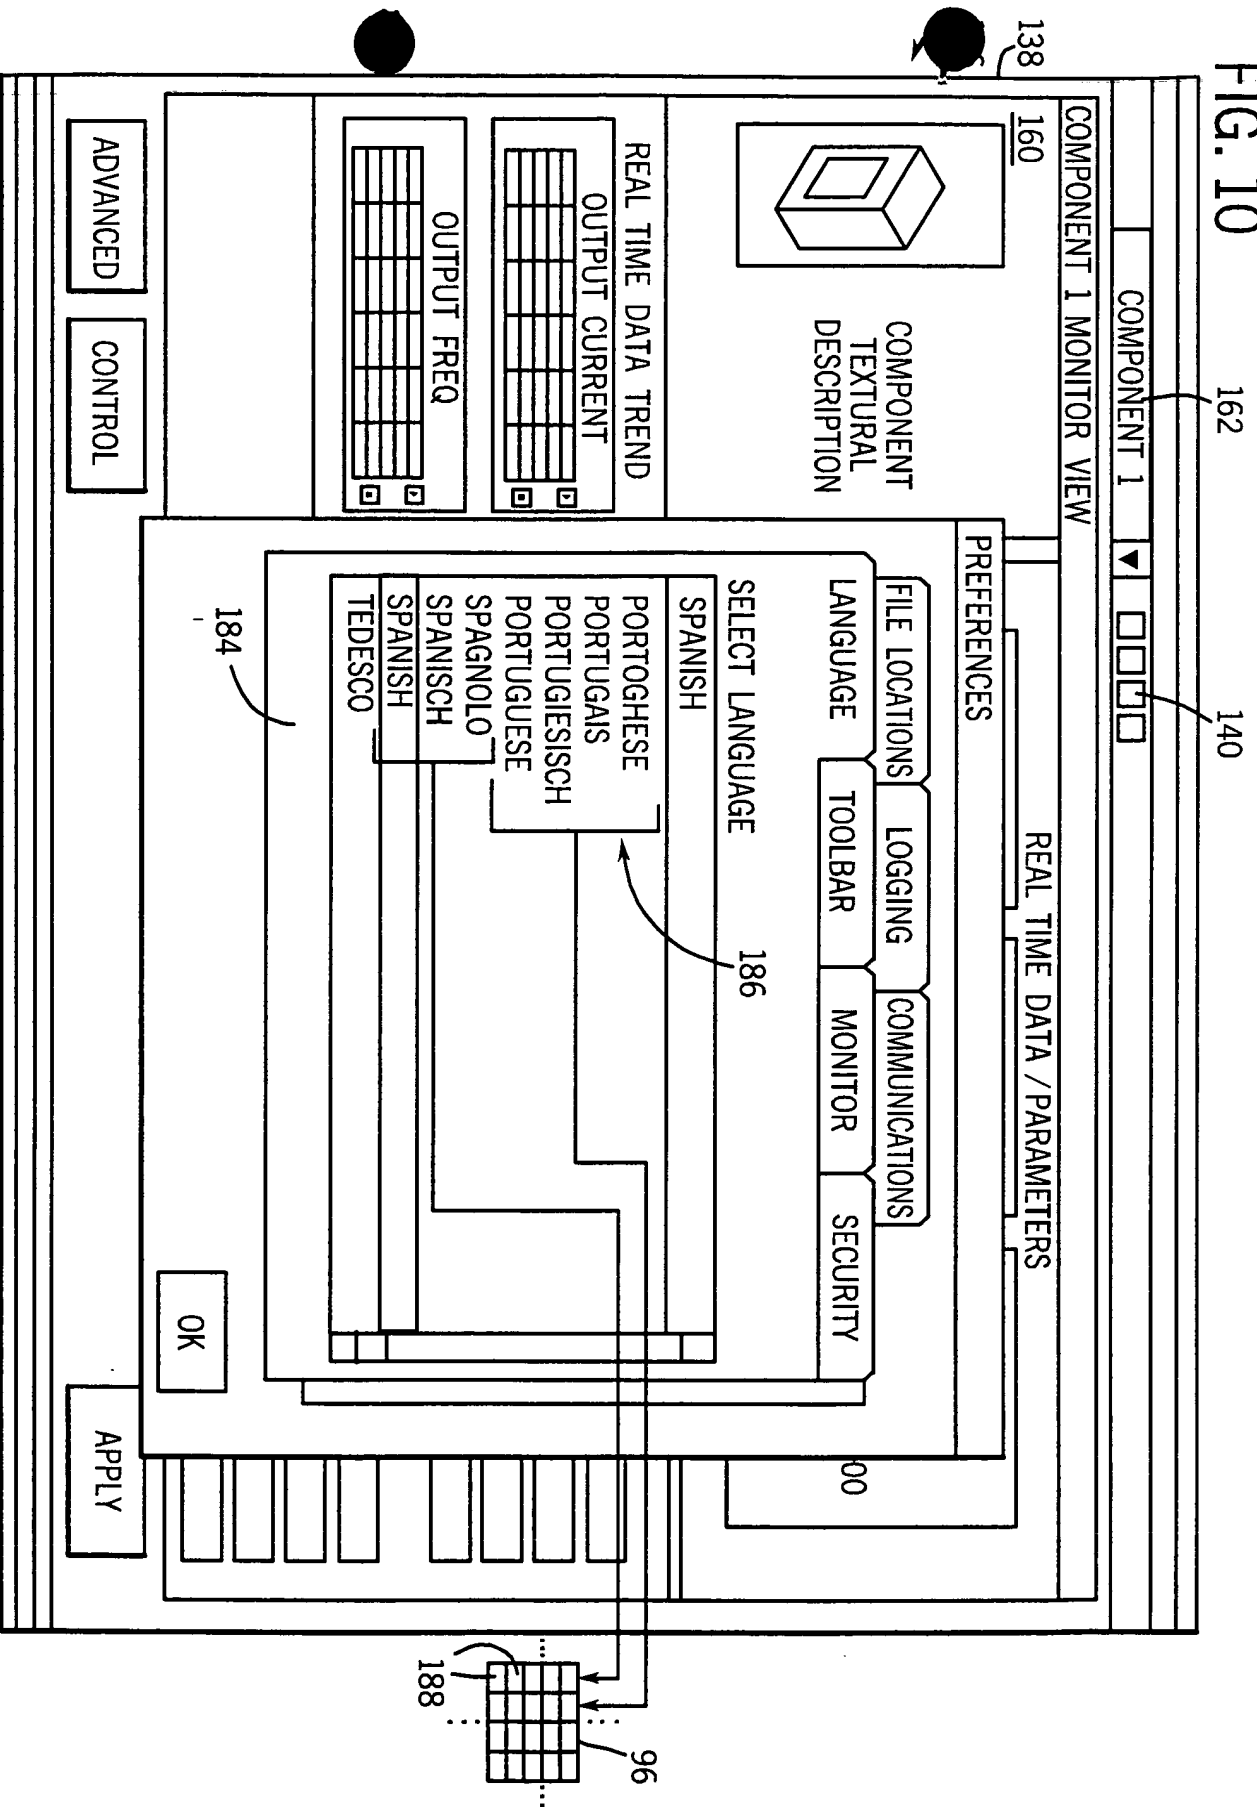


FIG. 11

SYSTEM 1

▼

144

140

SYSTEM 1 SPREADSHEET VIEW

SELECT SORT

NONE ▼

SELECT FILTER

NONE ▼

ASCENDING

DESCENDING

NONE

194

DNETDEVICE	NODE	VERT SECTION	UNIT LOC	SPACE FACTORS	UNIT TYPE	IN...	WIDTH	RATING	CATALOG NUMBER
DSA	07	2	E	1	FVNR		20	10HP	XXXXX
DSA	06	2	G	1.5	FVR		20	2HP	XXXXXXXXXX
DSA	05	2	K	1	FVNR		20	15HP	XXXXXXXXXX
NONE		2	M	0.5	DOOR		20		
1336IMPACT	27	3	A	1	ACD		20	400A	
NONE		3	F	1	DOOR		20		
DSA	09	3	H	2	FVNR				
DSA		4	A	1	FVNR				

SHOW / HIDE COLUMNS...

EDIT I/O...

SHOW / & HIDE COLUMNS

COLUMN NAME	
DNET DEVICE	<input checked="" type="checkbox"/>
STATE	<input type="checkbox"/>
NODE	<input checked="" type="checkbox"/>
SERIAL NUMBER	<input type="checkbox"/>
VERT SECTION	<input checked="" type="checkbox"/>
UNIT LOC	<input checked="" type="checkbox"/>
SPACE FACTORS	<input checked="" type="checkbox"/>
DUAL UNIT	<input type="checkbox"/>
LEFT / RIGHT	<input type="checkbox"/>

OK

CANCEL

FIG. 12

144

158

EVENT LOG

DOCUMENTATION

SYSTEM 1

SYSTEM 1 SPREADSHEET VIEW

SELECT SORT

NONE

ASCENDING

DESCENDING

NONE

REPORTS

MANUALS

SPARE PARTS

206

DEVICE SERIAL...	DATE	SECTION	LOCATION	DESCRIPTION	DEVICE TYPE	USER 1	USER 2	USER 3
1074397223	06 / 16 / 2000 14:12:54	3	A	SERIAL NO. CHANGE ON DEVICENET...	1336PLUSII			
1074397223	06 / 22 / 2000 11:03:26	3	A	SERIAL NO. CHANGE ON DEVICENET...	1336PLUSII			
1074397223	06 / 23 / 2000 15:32:47	3	A	NO COMMUNICATION	1336PLUSII			
1074397223	.	3	A	NO COMMUNICATION	1336PLUSII			
1074397223	.	3	A	NO COMMUNICATION				
1074397223	.	3	A	FAULT				

SHOW / HIDE COLUMNS...

FIG. 13

144

140

SYSTEM 1

ELEVATION VIEW SYSTEM 1

MANUALS

SELECT SORT

NONE

ASCENDING

DESCENDING

NONE

SELECT FILTER

NONE

NONE

NAME

NAME 1

NAME 2

NAME 3

PUBLICATION DESC.

DISCONNECT SWITCHES

DESCRIPTION 2

DESCRIPTION 3

DATE

1A-MCB

1E-FVNR

1G-FVNR

1

2

3

5

6

COMP 5

COMP DESIG

COMP DESIG

COMP 23

MP DESIG

READY

RUNNING

WARNING

FAULT

NO COMMUNICATION

EDIT SECTION

DOCUMENTATION

DRAWINGS

REPORTS

MANUALS

SPARE PARTS

APPLY

000000-000000

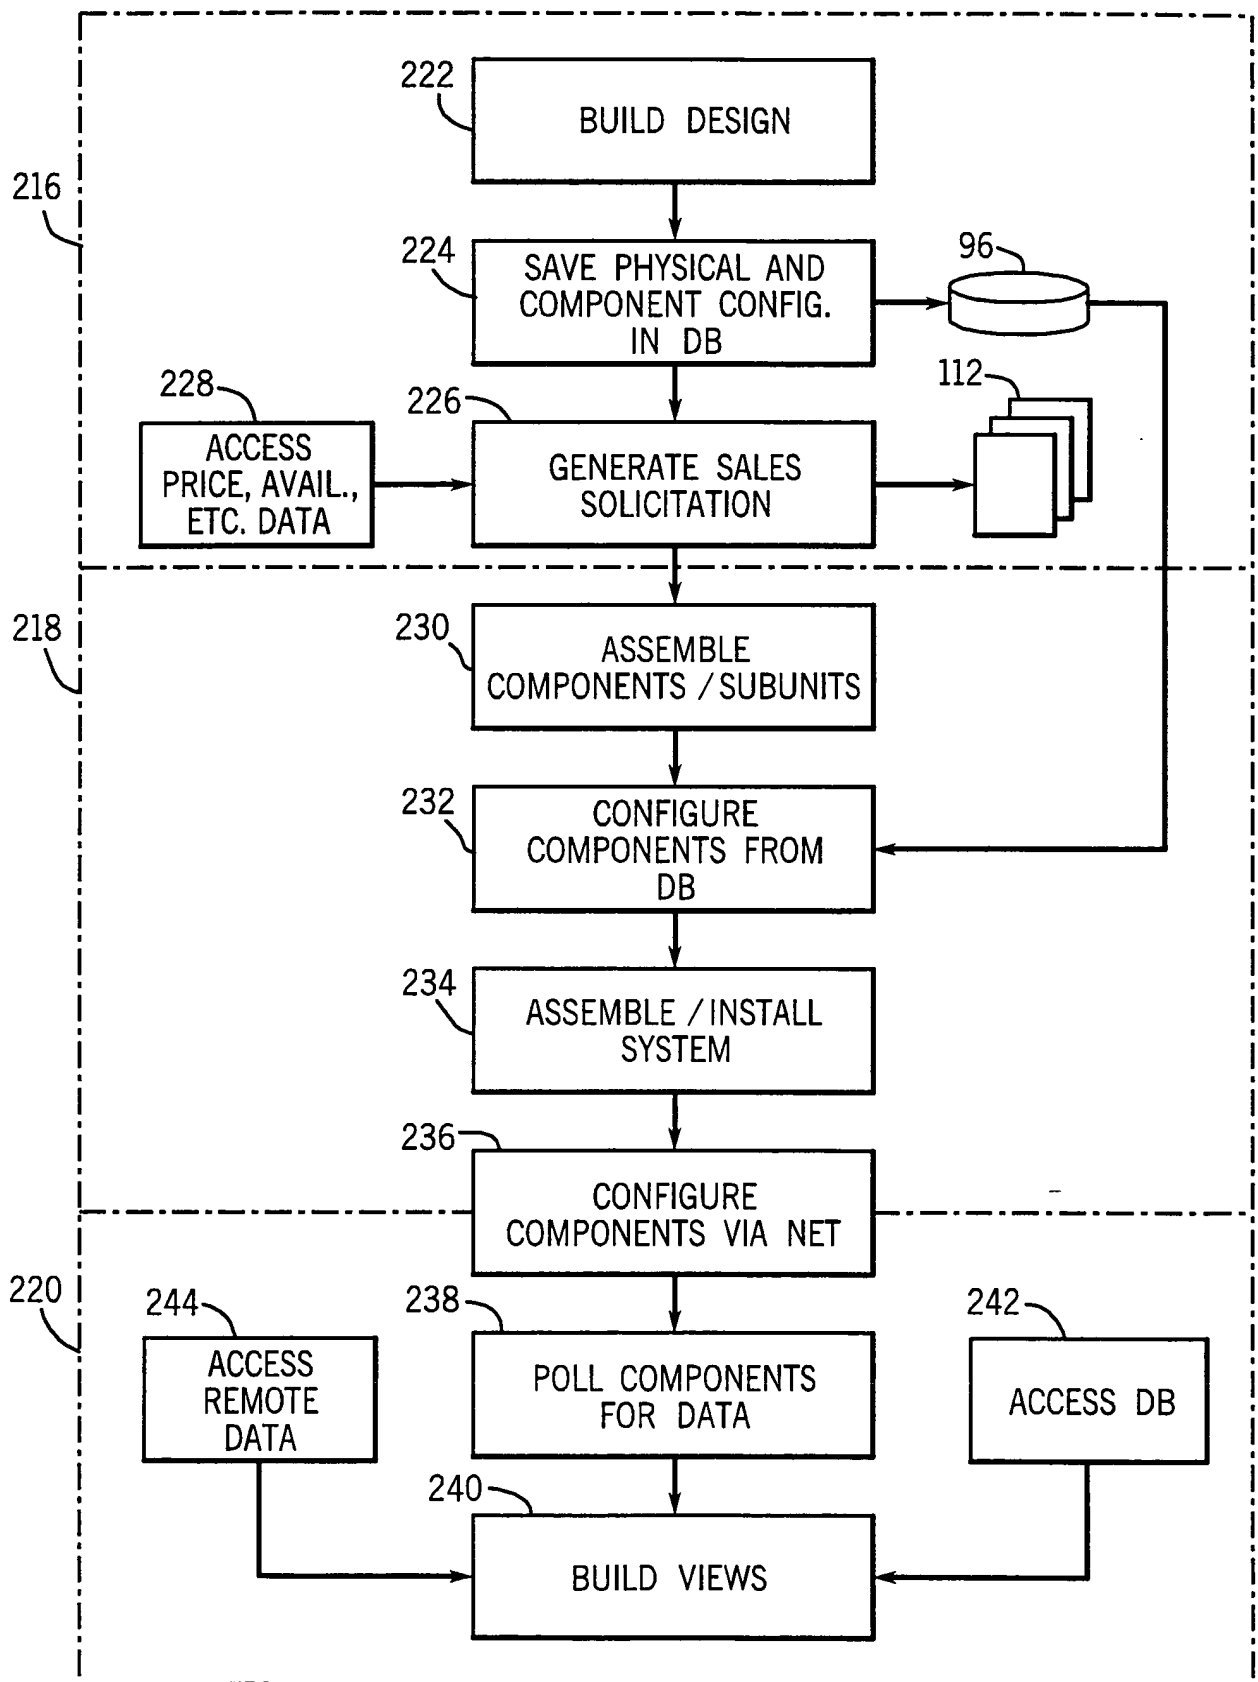


FIG. 14

214 ↗